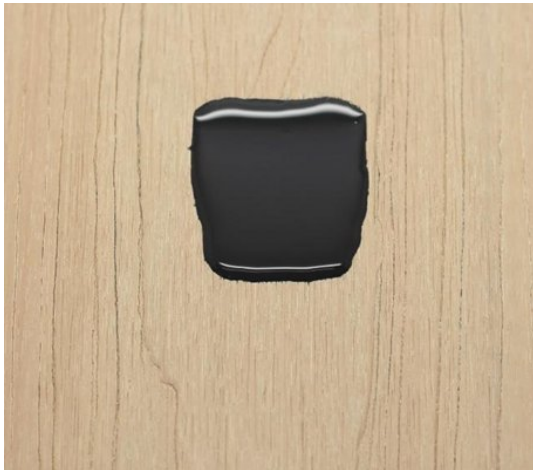

 **Step 1**
Stain with black ink

NEWTechWOOD (ULTRASHIELD®) DECKING

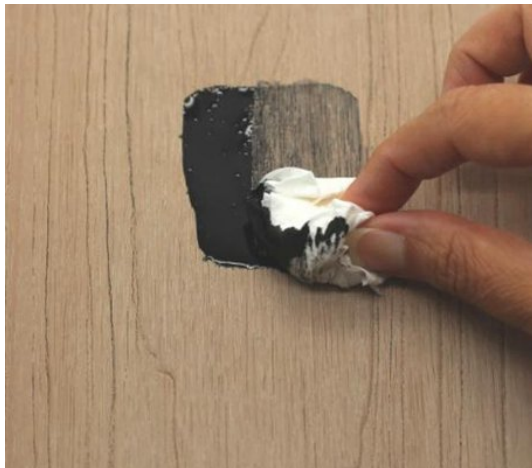


CONVENTIONAL DECKING




 **Step 2**
Wipe out half of the ink

NEWTechWOOD (ULTRASHIELD®) DECKING



CONVENTIONAL DECKING



 **Step 3**
Wash off by water

NEWTECHWOOD (ULTRASHIELD®) DECKING



CONVENTIONAL DECKING



 **Last Step**
Dry and see the result

NEWTECHWOOD - NO PENETRATION
THROUGH THE TOP LAYER AND **NO STAIN LEFT**



CONVENTIONAL DECKING -
STAIN REMAINS



For more information:

VIC, TAS, SA



25 Gaine Road
Dandenong VIC 3175
T: (03) 8769 7111
E: ntw.vic@brittontimbers.com.au

ALL OTHER STATES – WA, QLD, NT



Head Office
24 Tichborne Street
Cockburn Central, WA 6164
T: (08) 9494 1051
E: info@urbandirectwholesale.com.au

Websites: www.newtechwood.com.au
www.urbandirectwholesale.com.au